UPDATED ON JANUARY 31, 2022



www.studioefabrics.net

Dressed and Disessed

A Free Project Sheet **NOT FOR RESALE**

Bag



Featuring fabrics from the **Dressed and Obsessed** collection by **Anne Tavoletti** for **S.T.U.D.I.O**

Fabric Requirements

(A) 6674-29 ¹/₃ yard

(B) 6678-2 1 yard

(C) 6677-99 1/3 yard

(D) 1351-Carnation** 1/4 yard

* Includes Binding

** Just Color! Collection

Additional Supplies Needed


(2) 14 ½" x 23 ½" pieces of fusible fleece Piecing and sewing thread Quilting and sewing supplies

Project designed by Heidi Pridemore Finished Bag Size 15" x 12" x 4" Skill Level: Advanced Beginner


Fabrics in the Collection



Fashion Models Off White/Black - 6671-9

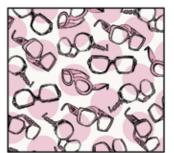

Tossed Glasses Pink - 6672-29

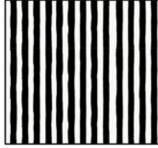


Black and White Stripe




High Heel Shoes Pink - 6674-29




3.25-Inch Squares Pink - 6675-29

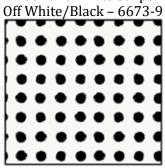

Large Dots Off White/Black - 6676-9

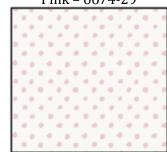

Small Dots Off White/Pink - 6677-2

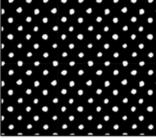

Small Dots Black - 6677-99



Tossed Accessories Off White/Pink - 6678-2



6-Inch x 6.5-Inch Blocks Black/Pink - 6679-92

Select Fabric from Just Color!



Carnation 1351-Carnation

Cutting

Cutting Instructions

Please note: All strips are cut across the width of fabric (WOF) from selvage to selvage edge unless otherwise noted.

WOF= Width of Fabric • LOF = Length of Fabric

Fabric A (6674-29 High Heel Shoes - Pink), cut:

• (2) 4 ½" x 23 ½" WOF strips.

Fabric B (6678-2 Tossed Accessories - Off White/Pink), cut:

- (6) 1 ½" x WOF strips, sub-cut (23) 1 ½" x 8 ½" strips.
- (1) 23 ½" x WOF strip, sub-cut (2) 14 ½" x 23 ½" strips.

Fabric C (6677-99 Small Dots - Black), cut:

• (6) 1 ½" x WOF strips, sub-cut (23) 1 ½" x 8 ½" strips.

Fabric D (1351-Carnation - Just Color-Carnation), cut:

• (1) 5" x WOF strip.


Sewing

Sew using a ¼" seam allowance with right sides together (RST) unless otherwise indicated. Always press towards the darker fabric while assembling, unless otherwise noted by the arrows.

Block Assembly

Note: The arrows in figures represent the fabric print direction. Pay attention to the fabric and unit orientations when assembling the various components.

- 1. Sew together (12) 1 $\frac{1}{2}$ " x 8 $\frac{1}{2}$ " Fabric B strips and (11) 1 $\frac{1}{2}$ " x 8 $\frac{1}{2}$ " Fabric C strips, alternating them from left to right, to make (1) Unit 1 strip (Fig. 1)
- 2. Sew (1) 4 ½" x 23 ½" Fabric A strip to the top of the Unit 1 strip to make Unit 2 (Fig. 2).

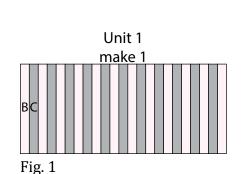

make 1

A


Unit 1

Unit 2


Fig. 2

• STUDIO **e** PROJECTS • www.studioefabrics.net


- 3. Sew together (12) 1 $\frac{1}{2}$ " x 8 $\frac{1}{2}$ " Fabric C strips and (11) 1 $\frac{1}{2}$ " x 8 $\frac{1}{2}$ " Fabric B strips, alternating them to make (1) Unit 3 strip (Fig. 3).
- 4. Sew (1) 4 ½" x 23 ½" Fabric A strip to the top of the Unit 3 strip to make Unit 4 (Fig. 4).

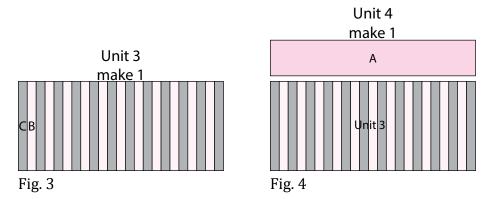

5. Following the manufacturer's instructions to press (1) $14 \frac{1}{2}$ " x $23 \frac{1}{2}$ " piece of fusible fleece to the wrong side of the Unit 2 strip (Fig. 5). Repeat with the Unit 4 strip. Quilt both strips as desired.

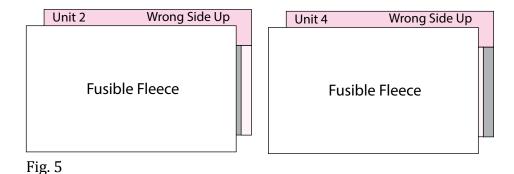


- 6. Place the Unit 2 and Unit 4 strips, right sides together. Sew down each short side and across the bottom to make the Outer Bag (Fig. 6).
- 7. Measure in from the left side and up from the bottom 2" and draw a box. Repeat with the other bottom corner (Fig. 7).
- 8. Cut each corner on the drawn line as shown in Figure 8.

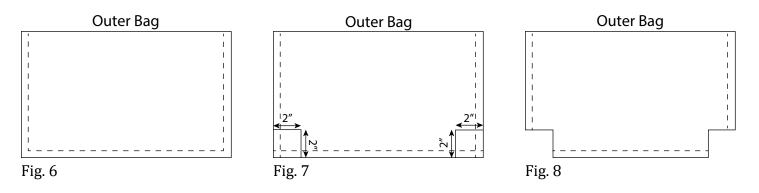


• STUDIO **e** PROJECTS • www.studioefabrics.net

- 9. Place (2) $14 \frac{1}{2}$ " x $23 \frac{1}{2}$ " Fabric B pieces, right sides together. Sew down each short side and across the bottom, leaving a 4" opening for turning to make the lining.
- 10. Repeat Steps 7-8 to cut the bottom corners of the lining (Fig. 9).

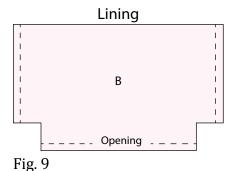

- 11. Open the cut bottom on the outer bag and align the bottom seam with the side seam to align and pin the two cut edges (Fig. 10). Sew the two edges together to make a box corner. Repeat with the other bottom corner on the outer bag.
- 12. Repeat Step 11 with the Lining to make a Box Bottom on the lining.

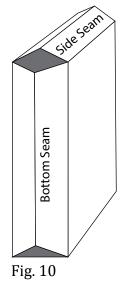

- 13. Fold (1) 5" x WOF Fabric D strip in half lengthwise and press (Fig. 11). Open the folded fabric and fold each long edge to the creased centerline and press (Fig. 12).

 Handle
- 14. Fold the pressed fabric in half again (Fig. 13).
- 15. Fold the Fabric D strip in half lengthwise one more time (Fig. 14) and top stitch down the long side 1/8" in from the edge to create a rolled handle (Fig. 15).
- 16. Fold the handle in half and cut to make (2) equal length Handles (Fig. 16).

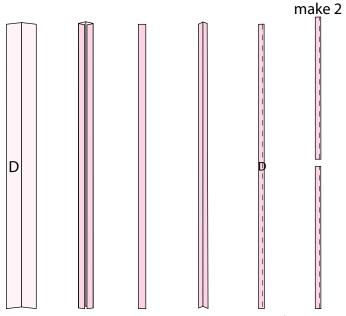
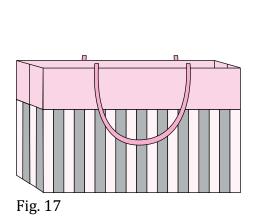


Fig. 11 Fig. 12 Fig. 13 Fig. 14 Fig. 15 Fig. 16

- 17. Position and pin one handle to the front of the bag as desired. Repeat with the bag back (Fig. 17). Check that you like the handle length. If needed, unpin and trim the handles to the desired length. Re-pin the handles to the bag front and front back.
- 18. Slide Outer Bag with Handles into the Lining, right sides together. Make sure the handles are between the Lining and Outer Bag (Fig. 18). Align the raw edges on the Lining with the raw edges on the Outer Bag and pin the layers together. Sew the layers together around the top edge to make the Bag.



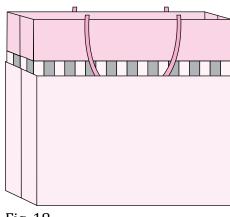


Fig. 18

- 19. Turn the Bag right side out through the opening in the Lining. Turn in the raw edges at the opening a ¼" and press. Topstitch the opening closed (Fig. 19).
- 20. Push the Lining into the Bag and press to complete.

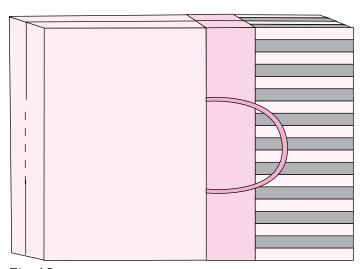


Fig. 19