



Follow us here to see more exciting projects and ideas!

Live Your Adventivre Quilt



Featuring the Live Your Adventure Collection by Louise Allen

Shipping to store July 2023

Finished Size: 50 ½ in x 50 ½ in (128.27 cm x 128.27 cm)

Fabric Needed

3 Wishes Fabric® Live Your Adventure Collection

- 1 yd Here's Your Sign (20740-TRQ-CTN -D) for Piecing and Binding
- ³/₄ yd Happy Camper (20744-TRQ-CTN-D)
- 5/8 yd Peace Love Travel (20742-WHT-CTN-D)
- 5/8 yd Adventure Patch (20739-WHT-CTN-D)
- 2 ½ yds Adventure Patch (20739-WHT-CTN-D) for Backing

Not included in the 3 Wishes Fabric® Collection

• 5/8 yd – Solid White Cotton

Additional Supplies Needed:


- 59 in x 59 in (149.86 cm x 149.86 cm) Cotton batting
- · Piecing and sewing thread
- Quilting and sewing supplies
- Even-feed foot (optional for quilting)

Before You Begin

Read all instructions before beginning project. Do not pre-wash fabrics. Press fabrics with a dry iron on cotton setting before cutting. Use a $\frac{1}{4}$ in (6.35mm) seam allowance and sew fabrics with right sides together (RST) unless otherwise noted. Press seams in the direction of the arrows. wof = width of fabric


Cutting

Use a rotary cutter and ruler to cut the size and number of squares and rectangles from each fabric listed below. Set aside remaining fabric for making the appliqués. *Note:* Check orientation of directional fabrics.

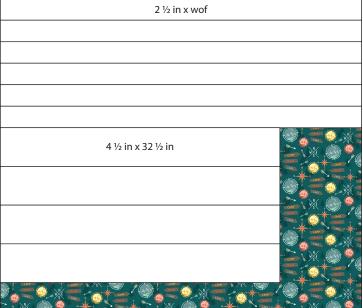

Here's Your Sign (20740-TRQ-CTN-D) – 1 yd (91.44 cm x wof)


Cut 6 – 2 ½ in x wof (6.35 cm x wof) for Binding Cut 4 – 4 ½ in x 32 ½ in (11.43 cm x 82.55 cm)

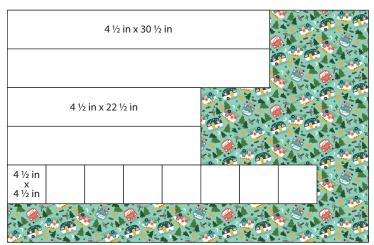

Happy Camper (20744-TRQ-CTN-D) - 34 yd (68.58 cm x wof)


Cut 2 – 4 ½ in x 30 ½ in (11.43 cm x 77.47 cm) Cut 2 – 4 ½ in x 22 ½ in (11.43 cm x 57.15 cm)

Cut 8 – 4 ½ in x 4 ½ in (11.43 cm x 11.43 cm)

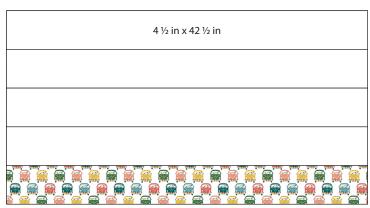


Peace Love Travel (20742-WHT-CTN-D) – 5/8 yd (57.15 cm x wof)

Cut 4 – 4 ½ in x 42 ½ in (11.43 cm x 107.95 cm)

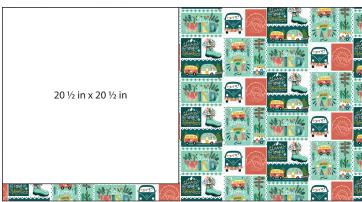

Adventure Patch (20739-WHT-CTN-D) - 5/8 yd (57.15 cm x wof)

Cut 1 – 20 ½ in x 20 ½ in (52.07 cm x 52.07 cm)

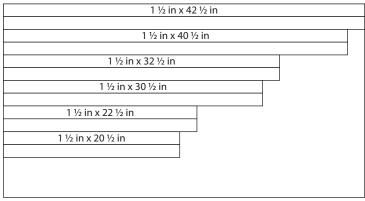

Solid White Cotton - 5/8 yds (102.87 cm x wof)

Cut 2 – 1 ½ in x 42 ½ in (3.81 cm x 107.95 cm)

Cut 2 – 1 $\frac{1}{2}$ in x 40 $\frac{1}{2}$ in (3.81 cm x 102.87 cm)

Cut 2 – 1 ½ in x 32 ½ in (3.81 cm x 82.55 cm)

Cut 2 – 1 ½ in x 30 ½ in (3.81 cm x 77.47 cm)


Cut 2 – 1 ½ in x 22 ½ in (3.81 cm x 57.15 cm) Cut 2 – 1 ½ in x 20 ½ in (3.81 cm x 52.07 cm)

www.3wishesfabric.com page 2

Sewing


Note: Check orientation of directional fabrics.

1. Place a Solid White rectangle 1 ½ in x 20 ½ in (3.81 cm x 52.07 cm) on each side of Adventure Patch square 20 ½ in x 20 ½ in (52.07 cm x 52.07 cm) as shown in Diagram A. Pin, sew and press. Place a Solid White rectangle 1 ½ in x 22 ½ in (3.81 cm x 57.15 cm) on the top and bottom. Pin, sew and press to create the Center Block measuring 22 ½ in x 22 ½ in (57.15 cm x 57.15 cm).

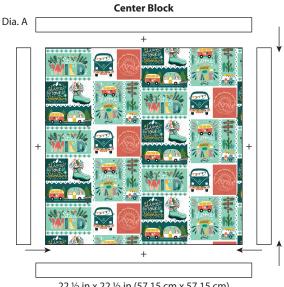


22 ½ in x 22 ½ in (57.15 cm x 57.15 cm)

Place a Happy Camper rectangle 4 ½ in x 22 ½ in (11.43 cm x 57.15 cm) on each side of the Center Block as shown in Diagram B. Pin, sew and press. Place a Happy Camper rectangle 4 ½ in x 30 ½ in (11.43 cm x 77.47 cm) on the top and bottom. Pin, sew and press to create Center Block 2 measuring 30 $\frac{1}{2}$ in x 30 $\frac{1}{2}$ in (77.47 cm x 77.47 cm).

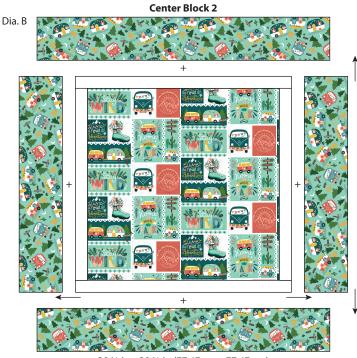

30 ½ in x 30 ½ in (77.47 cm x 77.47 cm)

www.3wishesfabric.com page 3 3. Place a Happy Camper square 4 ½ in x 4 ½ in (11.43 cm x 11.43 cm) on each side of a Here's Your Sign rectangle 4 ½ in x 32 ½ in (11.43 cm x 82.55 cm) as shown in Diagram C. Pin, sew and press to make the Inner Top Border measuring 4 ½ in x 40 ½ in (11.43 cm x 102.87 cm). Repeat to make the Inner Bottom Border.

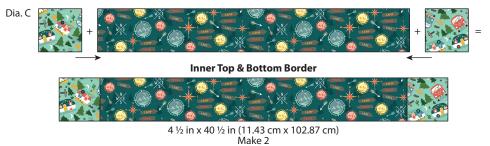

4. Place a Happy Camper square 4 ½ in x 4 ½ in (11.43 cm x 11.43 cm) on each side of a Peace Love Travel rectangle 4 ½ in x 42 ½ in (11.43 cm x 107.95 cm) as shown in Diagram D. Pin, sew and press to make the Outer Top Border measuring 4 ½ in x 50 ½ in (11.43 cm x 128.27 cm). Repeat to make the Outer Bottom Border.



5. Add another Solid White Border:

Place a Solid White rectangle 1 $\frac{1}{2}$ in x 30 $\frac{1}{2}$ in (3.81 cm x 77.47 cm) on each side of Center Block 2 as shown in Diagram E. Pin, sew and press. Place a Solid White rectangle 1 $\frac{1}{2}$ in x 32 $\frac{1}{2}$ in (3.81 cm x 82.55 cm) on the top and bottom. Pin, sew and press.

Add Inner Borders:

Place a Here's Your Sign rectangle $4\frac{1}{2}$ in x 32 $\frac{1}{2}$ in (11.43 cm x 82.55 cm) on each side as shown in Diagram E. Pin, sew and press. Place an Inner Border $4\frac{1}{2}$ in x $40\frac{1}{2}$ in (11.43 cm x 102.87 cm) on the top and bottom. Pin, sew and press to create Center Block 3 measuring $40\frac{1}{2}$ in x $40\frac{1}{2}$ in (102.87 cm x 102.87 cm).




6. Add Solid White Border:

Place a Solid White rectangle 1 $\frac{1}{2}$ in x 40 $\frac{1}{2}$ in (3.81 cm x 102.87 cm)on each side of Center Block 3 as shown in Diagram F. Pin, sew and press. Place a Solid White rectangle 1 $\frac{1}{2}$ in x 42 $\frac{1}{2}$ in (3.81 cm x 107.95 cm) on the top and bottom. Pin, sew and press.

Add Outer Borders:


Place a Peace Love Travel rectangle $4\frac{1}{2}$ in x $42\frac{1}{2}$ in (11.43 cm x 107.95 cm) on each side as shown in Diagram F. Pin, sew and press. Place an Outer Border $4\frac{1}{2}$ in x $50\frac{1}{2}$ in (11.43 cm x 128.27 cm) on the top and bottom. Pin, sew and press to create the Quilt Top measuring $50\frac{1}{2}$ in x $50\frac{1}{2}$ in (128.27 cm x 128.27 cm).

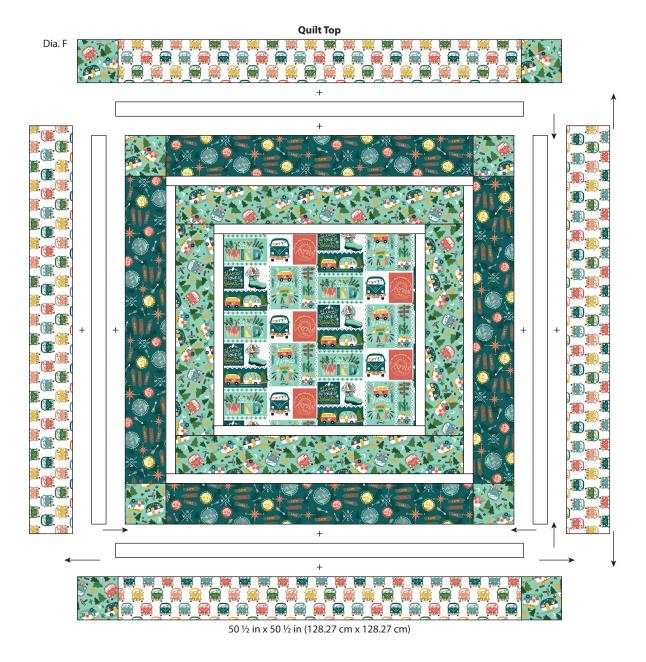

www.3wishesfabric.com page 5


Finishing

5. Remove the selvages from the Adventure Patch Backing fabric. Cut one piece 40 ¼ in x 56 in (102.24 cm x 142.24 cm) and two pieces 16 ¼ in x 28 ¼ in (41.28 cm x 71.76 cm). Pin RST and sew the two smaller pieces on the short edges; press. Pin the two sections RST and sew along the long edges as shown in Diagram H. Press the seam open or to one side. The Backing should measure 56 in x 56 in (142.24 cm x 142.24 cm).

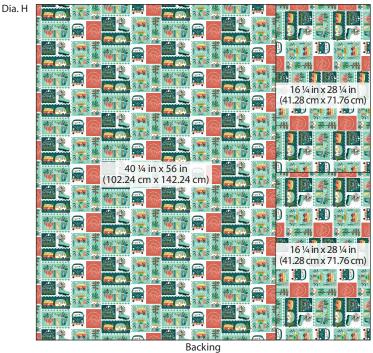

56 in x 56 in (142.24 cm x 142.24 cm)

- 7. Press finished Quilt Top and Backing. Tape the Backing, **wrong** side up, to a firm surface. Layer Batting and Quilt Top (right side up). Baste the layers together with safety pins. Quilt as desired.
- 8. Once quilting is complete, square up corners and edges, trimming excess Backing and Batting even with the Quilt Top.
- 9. **Binding** Follow Diagram I to make the Here's Your Sign Binding. Remove selvages and sew the short ends of the six 2 ½ in (6.35 cm) x wof strips RST end to end at a 45° angle to make one continuous strip; press seams open. Press one short end ¼ in (6.35 mm) to the **wrong** side. Fold in half lengthwise with **wrong** sides together; press. Leaving a 2 in (5.08 cm) tail on the folded end, place cut edges of folded Binding even with the edge of the Quilt Top and sew, mitering the corners. Overlap ends, trim any excess and finish sewing the Binding. Fold Binding over to back and hand stitch.

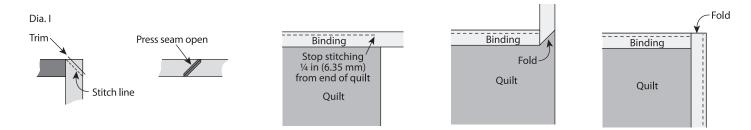

Finished Care Instructions

Machine wash in cold water; gentle cycle. Do not bleach. *Tip:* Before drying, check for fabric dyes that may have run. If fabric dyes run, rewash and rinse using a color catcher to absorb loose dye. Lay flat to dry or tumble dry low.